

# DockSide Radio

1368 Willet Court  
Punta Gorda, FL 33950

## Programming the Icom-M802 & the Hidden Dial Mode

To reprogram any of the User Group Channels it is first necessary to put the M802 in the "Open/dial Mode" not discussed in early documentation. In addition to being necessary for reprogramming any of the user Group Channels, the dial makes it possible to tune the radio like a regular AM or ham radio. Here's how to put the radio into the Open Dial mode, and reprogram the User Group Channels with new frequencies::

Step	Instruction	Dial Display Change
1.	Put the radio into the OPEN mode.	Normal dial display. The M802 doesn't indicate if it's in the OPEN or CLOSED modes.
2	Enter Open/dial Mode	<b>8152.0</b>
3	Selecting a Frequency	<b>8152.0</b>
4	Selecting a Frequency	<b>14152.0</b>
5	Selecting a Frequency	<b>14152.0</b>
6	Selecting a Frequency	<b>14352.0</b>
7	Selecting a Frequency	<b>14352.0</b>
8	Selecting a Frequency	<b>14312.0</b>
9	Selecting a Frequency	<b>14312.0</b>
10	Selecting a Frequency	<b>14313.0</b>
11	Transmit & receive on the new frequency	The SIMP displayed on the first line of the LCD indicates the transmit and receive frequencies are the same.
12	Returning to Channel Mode	

Note: It is not necessary to set each column individually. Put the cursor under any of the columns and rotate the right-hand knob, tuning the radio as you would a regular AM / FM radio. Remember, the leftmost column is MHz and the rightmost column is 100 Hz. The farther to the right a column is, the finer the tuning increment.

Revised 9/2007

Serving Boaters Coast to Coast

# DockSide Radio

1368 Willet Court  
Punta Gorda, FL 33950

## Programming Simplex Frequencies into User Channel Group

Step	Instruction	What's Happening
1	Press the <b>Freq/CH</b> button to put the M-802 into the <i>Channel Mode</i> if necessary.	With each press of the CH/Freq button the LCD display will toggle back and forth, displaying the selected radio channel, and with the next press displaying the frequency stored in that radio channel.
2	Select the channel you wish to program by turning the large right-hand knob (channel selector knob)	The channel selector knob selects channels within a <i>Channel Group</i> .
3	Press the <b>CLAR/RX</b> button	You will see a { ▶ } on the upper line of the LCD display.
4	Enter the desired frequency using the <b>keypad</b> , or dial it in if the M0802 ins in the Dial Mode.	You are selection the new receive and transmit frequency.
5	Press and hold the <b>ENT</b> key.	Stores the new RX & TX frequency and mode for this radio channel into the M-802's permanent memory. The caret symbol { ▶ } disappears, the LCD display reverts back to showing the channel label, and SIMP is displayed on the top line.

## Programming Duplex Frequencies into User Channel Group

1	Store the receive frequency following steps 1 through 5 above.	Writes the receive frequency into memory
2	Press the <b>TX</b> key	LCD display changes to the frequency mode and TX flashes.
3	Enter the transmit frequency with the keypad.	
4	Press and hold the <b>ENT</b> key.	Writes the transmit frequency into memory. The LCD display reverts back to showing the channel label and DUP replaces SIMP on the top line.

## Adding Names/Labels to Your Channels

Step	Instruction	What's Happening
1	Press the <b>Freq/CH</b> key if necessary.	Put the M-802 into the <i>Channel Mode</i> if necessary.
2	Press the "F" (Function button)	Enable the function mode.
3	Press the <b>Freq/CH</b>	The leftmost character position becomes active
4	Rotate the right-hand <b>Channel Selector</b> knob to select the first character position.	Rotating the channel selector knob selects the character position where you want to enter a letter or number.
5	Using the keypad, enter the desired character.	
6	Rotate the right-hand <b>Channel Selector</b> knob to select the next character position.	Move to the next character position.
7	Using the <b>Keypad</b> , enter the next character.	
8	Continue with steps 6 - 7 until you have either completed the channel label, or all eight positions are filled.	The maximum channel label size is eight characters.
9	Press <b>ENT</b> when finished.	Writes the newly entered channel label into the radio's permanent memory.

Revised 9/2007

Serving Boaters Coast to Coast